




® Patented

SMART DryFireMag® for Sig Sauer® P320 Instructions



- #1. **Charge your new Smart DryFireMag** by plugging the included USB-C cable into the USB charging port (location depicted above/left). Continue charging the mag until the green light goes out. Total charge may take 2.25 hr.
- #2. Unscrew the optic cap from the laser body and **insert the LR726 Battery Pack** with the POS + end of the battery facing the cap. Screw the cap back down fully, or the slide will not close completely after insertion. **DO NOT use unwrapped, individual batteries**, as it will not function correctly, and damage to the laser will likely result.
- #3. If present, **remove any factory mag** from your firearm.
- #4. Pull the slide back, and **engage the slide-lock**. **Make sure your firearm is clear of Ammo**. Remember, **"No Mag", does NOT mean "No Ammo"**.

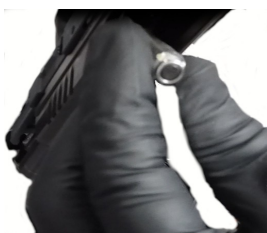

- #5. With the barrel pointed down, and the laser cap facing the rear of the gun, **drop the laser into the barrel**. Push the laser into the barrel as far as it will go, by gently applying pressure to the back of the cap with either a finger or the plunger dowel. Perform a "controlled release" of the slide.

- #6. **Install the Safety Pipe** (recommended so those around you know that you are handling an "ammo-free" firearm, and you remember that there is a laser in the barrel) Gently push the pipe into the barrel until you feel it bump against the front of the laser, then spin the pipe clockwise into the laser until it is snug. Do not tighten. Screw the **Orange Safety Nut** onto the end of the pipe just until the pipe is wiggle free. (**Note:** If the cartridge is spinning around while turning the pipe or the nut, re-engage the slide-lock, and apply pressure to the back of the laser to tighten. Release the slide after assembly is complete.)



- #7. **Apply the appropriate mag spacer** to the mag to fill any gap between the base of the mag and the bottom of the grip.
- #8. **Insert the DryFireMag** into the mag-well until you hear and feel it lock into place.
- #9. **Aim the firearm in a safe direction**. You are ready to start dry fire practice with your Smart DryFireMag and Smart Laser.



- #10. **When through with practice**, disassemble the Safety Pipe, and remove it from the barrel.
- #11. Press the mag-release, and extract the Smart DryFireMag.
- #12. Pull the slide back and re-engage the slide-lock. **Insert the Barrel Plunger** into the muzzle and push the laser out of the barrel. Catch the laser at the bottom of the mag-well. Release the slide.
- #13. Unscrew the cap from the laser and remove the battery pack to preserve its power.

PLEASE NOTE: Due to the wide range of firearm customizations available, your **DryFireMag®** may require some easy adjustments in order to meet your expectations. If you plan to use the **DryFireMag®** in more than one pistol, each one may require a unique **DryFireMag®** adjustment.

Your **DryFireMag®** has been pre-adjusted to have an approximate Trigger Pull-Weight of 6 lb.

To increase the feel/weight of the trigger pull, the *included* coil spring will need to be inserted.

Always wear safety glasses when handling springs.



To install the included spring, set one end of the coil over the lever's spring retainer knob, compress the spring slightly, then push the other end into the spring pocket. Manually operate the lever a few times to insure that the spring got seated properly. You may need to slightly advance the trigger break-point to get it back on target after installing the spring.

Adjusting the pre-travel, or the point of the simulated release of the firing pin

- Locate the 3/32 Allen wrench and the top hole on the **front** of the magazine. **(See pic on front page)**
- To shorten the trigger pre-travel, turn the set screw clockwise 1/8 of a turn. Reinsert the **DryFireMag®** and test. If a shorter pre-travel is still desired, repeat adjustment and retest. **Do not turn this adjustment more than one TOTAL turn.**
- To lengthen the trigger pre-travel, turn the set screw counter clockwise 1/8 of a turn. Reinsert the **DryFireMag®** and test. If a longer pre-travel is still desired, repeat adjustment and retest. **Do not turn this adjustment more than one TOTAL turn.**

Synchronizing the Laser Fire with the Trigger-Break

- **Make sure the trigger-break is matching the true dry-fire break before adjusting laser fire.**
- If the **laser is firing after the trigger-break**, adjust the Laser Timing Screw 1/8 turn CW, and try again. You may repeat this, but don't force a turn past the stop.
- If the **laser is firing before the trigger-break**, adjust the Laser Timing Screw 1/8 turn CCW, and try again. You may repeat this up to 1/2 total turn.
- If there is **no laser fire**, first confirm the battery orientation in the laser. If correct, try turning the **Laser Timing Screw** 1/8 CW and test. You may repeat this once more.



NOTE: **DryFireMag®** strongly recommends maintaining a frequent lubrication schedule per OEM protocol regarding lubrication points and products, especially when dry-firing with the **DryFireMag®**. Failure to do so may result in inconsistent, or poor trigger reset functionality, as well as immoderate wear in trigger assembly parts.

If you need further assistance, please contact us @ 1-844-844-4600, or email TechSupport@DryFireMag.com.

Customer satisfaction is our #1 goal!

Satisfaction Guaranteed: If you are not completely satisfied with your **DryFireMag®**, you may return it **within 30 days** of having received it for a full refund. Your refund will be paid when the product is received by **DryFireMag®, LLC** unaltered and undamaged. Contact **DryFireMag®** at [Returns@DryFireMag.com](mailto>Returns@DryFireMag.com) for authorization and a return label.

Warranty:

DryFireMag® will repair or replace at our option any **DryFireMag®** malfunctioning due to workmanship or faulty materials within one (1) year of purchase. This will be determined at the sole discretion of **DryFireMag®, LLC**. Tampering or physical damage will not be covered by warranty. This warranty covers the original purchase price of the **DryFireMag®**.

If a repair is needed, whether still under warranty or not, go to the DryFireMag.com "Contact Us" page, click on the "PRODUCT SUPPORT" square (the gear icon), and click on the TECH SUPPORT button to submit a form. You will be sent an RMA which includes a Payment Link. If you purchased from **DryFireMag.com**, and still under warranty, a return label will also be sent.

If the **DryFireMag®** is not under the one (1) year warranty, a nominal repair fee will apply.

*Anyone using the **DryFireMag®** assumes full responsibility for its use. **DryFireMag®, LLC** assumes no responsibility for any damage to property or any injury due to any use of this device.*