



## DryFireMag® for Ruger RXM Instructions

**WARNING!** Check to be sure the gun chamber is empty BEFORE attempting to insert the DryFireMag® into your firearm.

**THIS DEVICE IS SIMPLE TO USE, BUT IT MUST BE INSTALLED PROPERLY.**

1. Pull the slide all the way back on the firearm, and let it go (in other words, “cycle” the slide).



2. Insert the DryFireMag® completely into position. This may require a firm “bump” with the palm of the hand. You should hear an audible “click” when the mag gets locked in.


(Note: It's a good idea to grab the base-plate and pull down to insure that the mag is locked in.)

3. Aim in a safe direction. **It's ready to go!**

(NOTE: The first trigger pull will be heavy, as it is releasing the firing pin and the DryFireMag® together. Subsequent trigger pulls should closely match your true dry-fire in pull weight.)

**NOTICE:** AVOID CYCLING THE SLIDE WITH THE DryFireMag® INSERTED. JAMS MAY OCCUR.

**When dryfire practice with your DryFireMag is over,** point the gun in a safe direction, press the mag-release, extract the mag, and pull the trigger. Failure to complete this step may result in a slide that is difficult to retract.

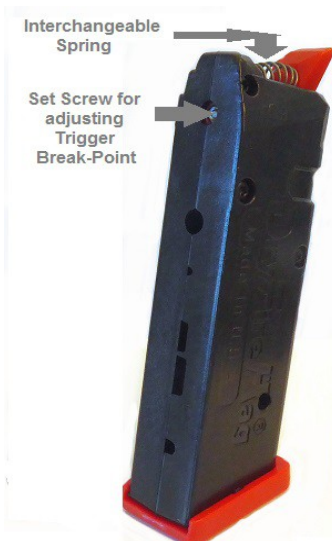

**Note:** Some adjustments may be necessary due to the variations in firearms. See the other side of this instruction sheet for tips on how to adjust the trigger-break-point (when the DryFireMag is installed) to match your firearm's real dry-fire trigger-break. For more visual instruction, please view the videos available on the DryFireMag website under this product.

**PLEASE NOTE:** Your **DryFireMag®** has been pre-set for optimal performance right out of the box for the stock **Ruger RXM**. Customizations and model variations may require an adjustment to meet your unique application.

Your **DryFireMag®** has been tested and adjusted to the standard trigger pull weight of approx. **5<sup>1/2</sup> lbs.**

**Lowering the Trigger-Pull-Weight** in your **DryFireMag®** can be accomplished with ease by changing out the lever spring with the lighter coil spring included with your purchase.

**(Remember to always wear safety glasses when changing springs).**

### **How to adjust pre-travel (distance the trigger travels before "breaking" to the stop).**

1. Locate the #10 Allen wrench and the top hole on the back of the magazine.
2. To shorten the trigger pre-travel (cause an earlier break), turn the set screw clockwise 1/8 of a turn. Reinsert the DryFireMag® and test. If pre-travel is still not short enough, repeat adjustment and retest. **Do not exceed a maximum of one complete turn. Excessive clockwise adjustment can cause mag failure.**
3. To lengthen the trigger pre-travel, turn the set screw counter clockwise 1/8 of a turn. Reinsert the DryFireMag® and test. If an even longer pre-travel is desired, repeat adjustment and retest. **Do not exceed a maximum of one complete turn. Excessive CCW adjustment can cause reset failure or interference with insertion.**

*If you need assistance making adjustments, please contact DryFireMag®  
Toll Free at (844) 844-4240, or email [TechSupport@DryFireMagService.com](mailto:TechSupport@DryFireMagService.com)*

### **Customer satisfaction is our #1 goal!**

**Satisfaction Guaranteed:** *If you are not completely satisfied with your **DryFireMag®**, you may return it within **30 days** of having received it for a full refund. Upon request, **DryFireMag®, LLC** will send a return label. We cannot provide postage for customers outside of the USA and its territories. Your refund will be issued when the product is received in an unaltered and undamaged condition.*

**Warranty:** *DryFireMag® will repair or replace your **DryFireMag®** at our option within 1 year of purchase for any malfunction of the **DryFireMag®** due to workmanship or faulty materials. Any malfunction due to tampering or physical damage will not be covered by this warranty. This will be determined at the sole discretion of DryFireMag, LLC. This warranty covers the original purchase price of the **DryFireMag®**. Contact us through the DryFireMag.com "Contact" page and choose the link that applies.*

*Anyone using the **DryFireMag®** assumes full responsibility for its use. DryFireMag LLC. assumes no responsibility for any damage to property, or personal injury due to any use of this device.*

**Be sure to register your DryFireMag® @  
[www.dryfiremag.com/dryfiremag-product-registration/](http://www.dryfiremag.com/dryfiremag-product-registration/)**

DryFireMag is a registered trademark of DryFireMag, LLC